

 
 


INSTALLATION INSTRUCTIONS


Razor® Arrow

PARTS INCLUDED

RAZOR ARROW BLADE (8.0' Set-up shown)



2 - 4' RAZOR ARROW BLADE SECTIONS

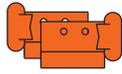

PLOWGUARD CURBGUARD JR
(Left and Right)



PLOW BOLT KIT
INCLUDED

Other blade widths available to fit 7.5', 8.5', 9.0', and 10.0' plows




IMPORTANT!

The moldboard mounting surface must be clean of all foreign material prior to installing new blades and hardware to avoid issues with bolt loosening while in service.

- ◆ For torque recommendation, please refer to SAE J1701
- ◆ Re-torque hardware after the first 10 plow hours


Step 1

Install drivers side main cutting edge with included shorter plow bolts. Hand tighten. Do not install bolts in drivers-side two bolt holes on the end. These two holes will be used after plow guard installation.

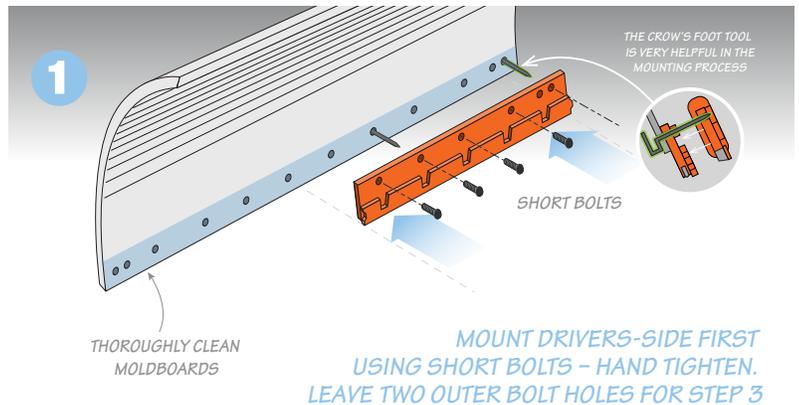


Step 2

Install passengers-side main edge with included shorter plow bolts, making sure it interlocks with driver's side. Hand tighten. Do not install bolts in drivers side two bolt holes on the end. These two holes will be used after plow guard installation.

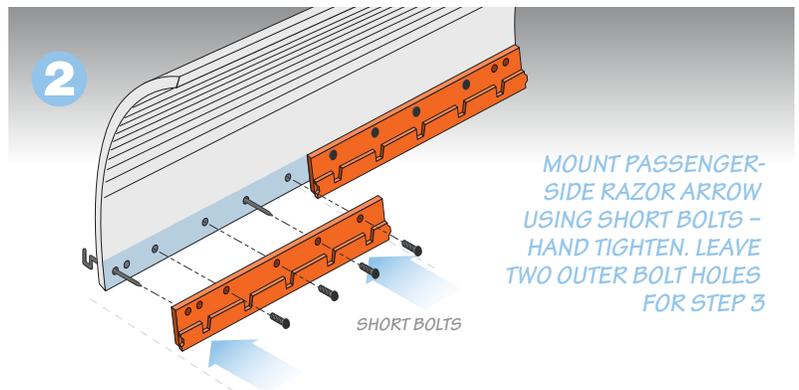

Step 3


Install both PlowGuard Jr.'s on drivers- and passengers-side ends with included longer plow bolts. Hand tighten.

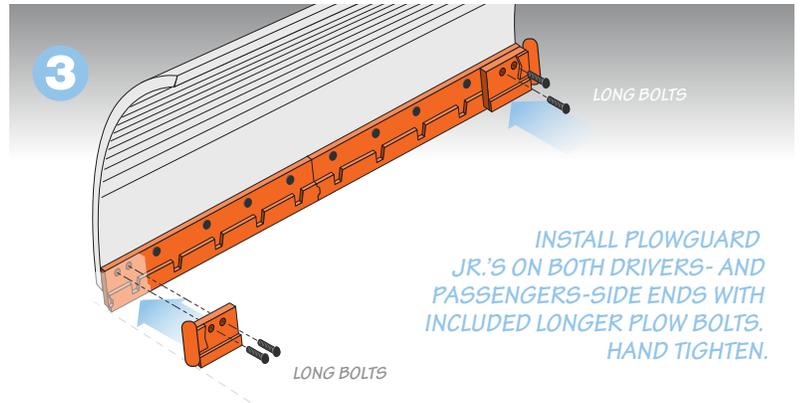

Step 4

Set entire assembly on ground to ensure it's level.

Fully tighten all bolts. For torque specification, please refer to SAE J1701.

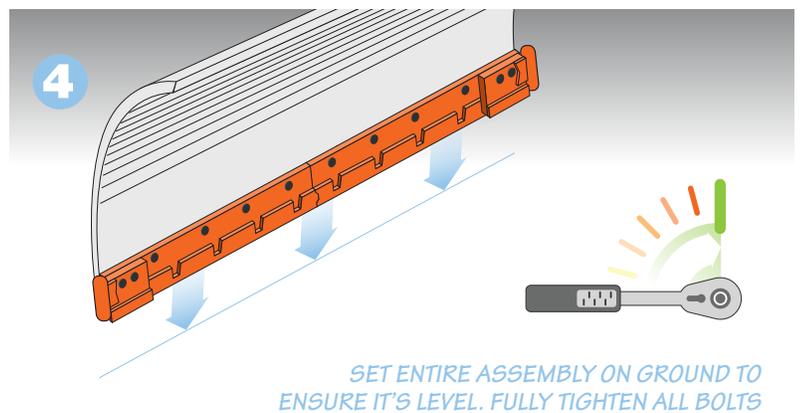

Re-torque hardware after the first 10 plow hours